


**- WIRING INSTRUCTIONS -**  
**magnetic lock or fail safe strike with button, keypad and PIR**  
**wired in series**

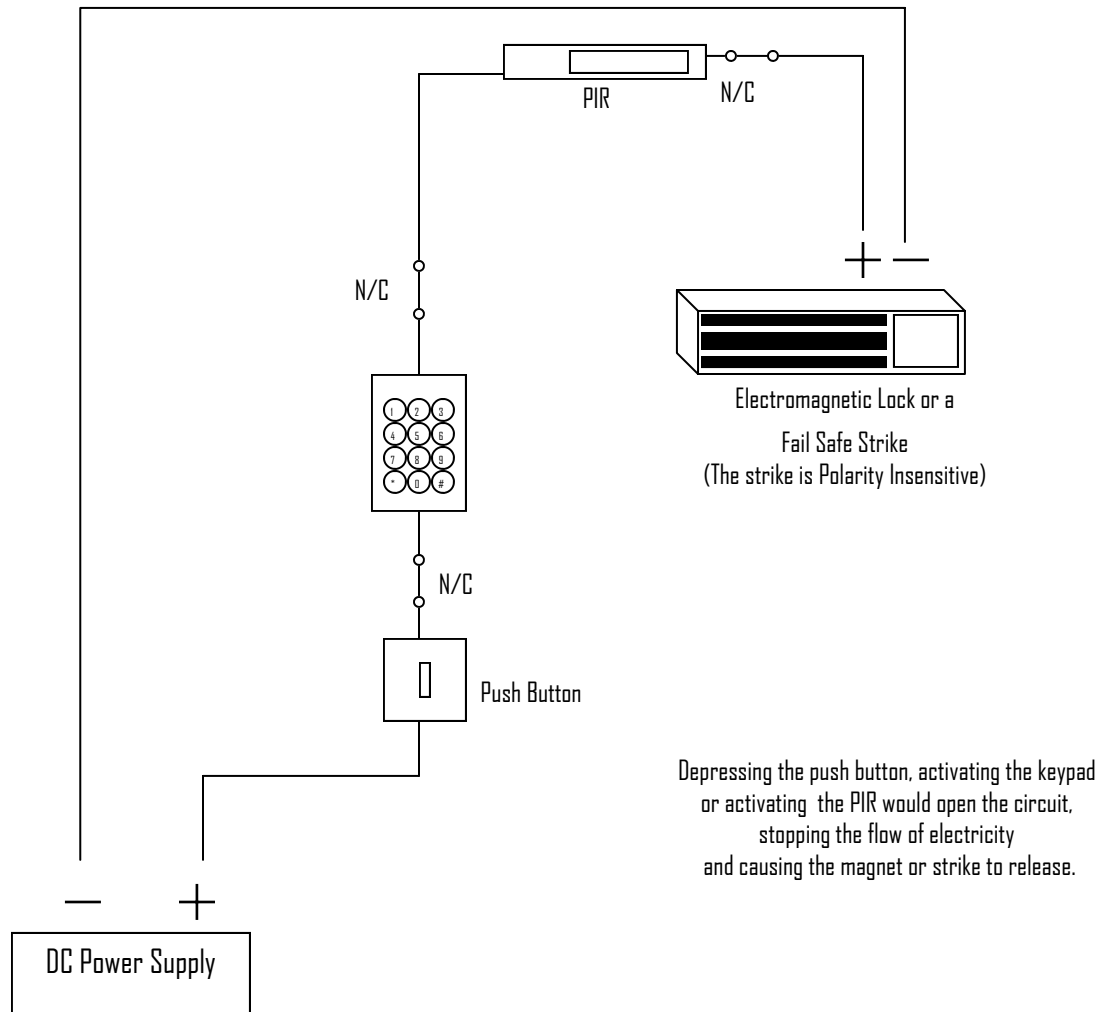

Power Supply for fail safe strikes and magnetic locks should be DC. If this is not available you may use an AC power source and wire inline a "Full Wave Bridge" rectifier. This will convert the AC to DC.

If you hear a "buzzing" sound, recheck your output on you power source to ensure that it is DC output, or you can damage the magnetic lock or fail safe strike,