


- WIRING INSTRUCTIONS—
Magnetic lock or fail safe strike with button, keypad,
maintained button and remote receiver.

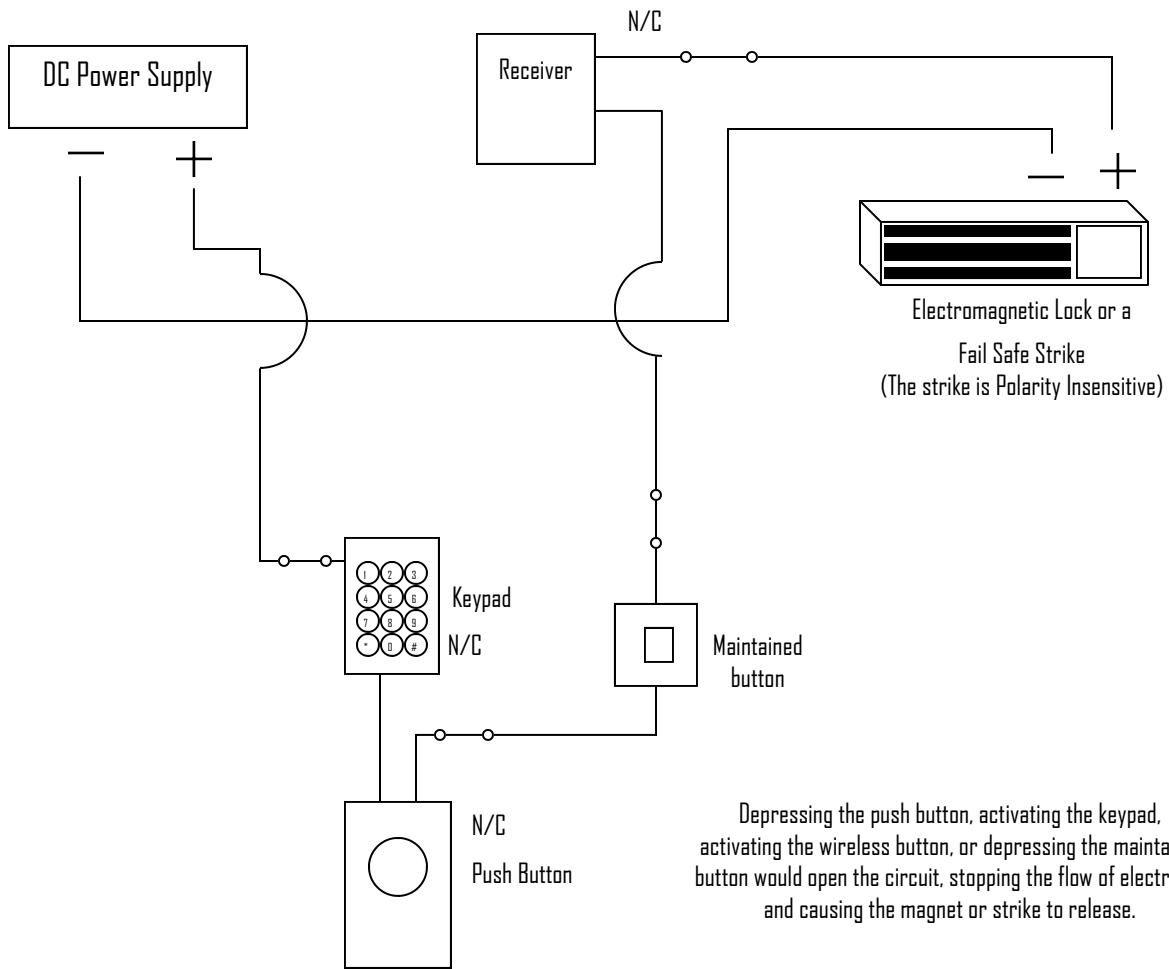

Power Supply for fail safe strikes and magnetic locks should be DC. If this is not available you may use an AC power source and wire inline a "Full Wave Bridge" rectifier. This will convert the AC to DC.
 If you hear a "buzzing" sound, recheck your output on you power source to ensure that it is DC output, or you can damage the magnetic lock or fail safe strike,