



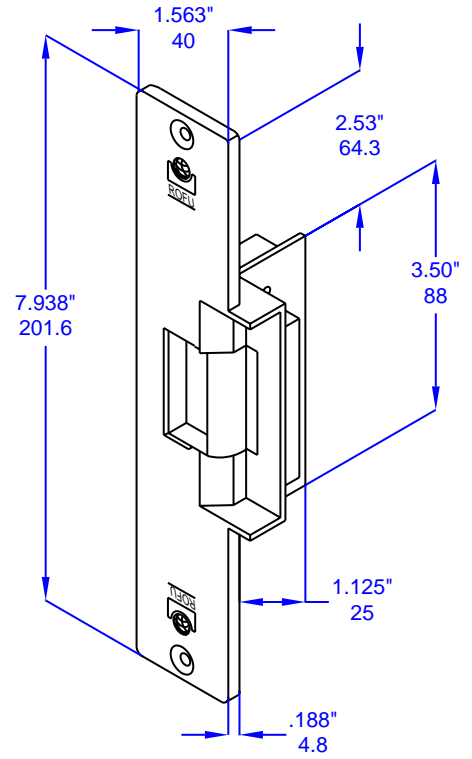

LINE ART FOR 1509

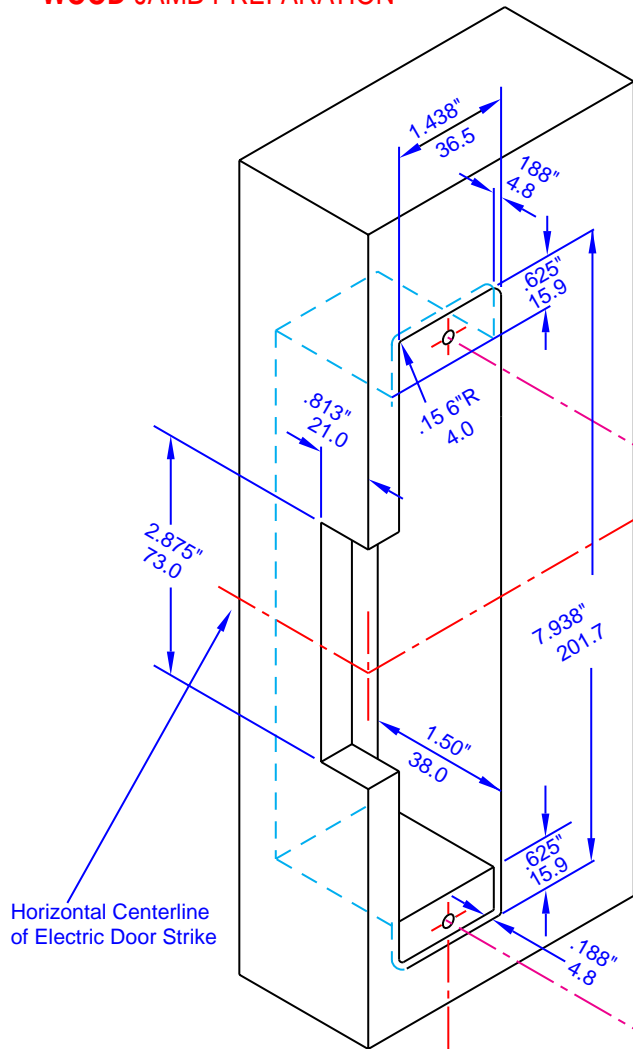


WOOD JAMB PREPARATION



Horizontal Centerline of Electric Door Strike

INSTALLATION

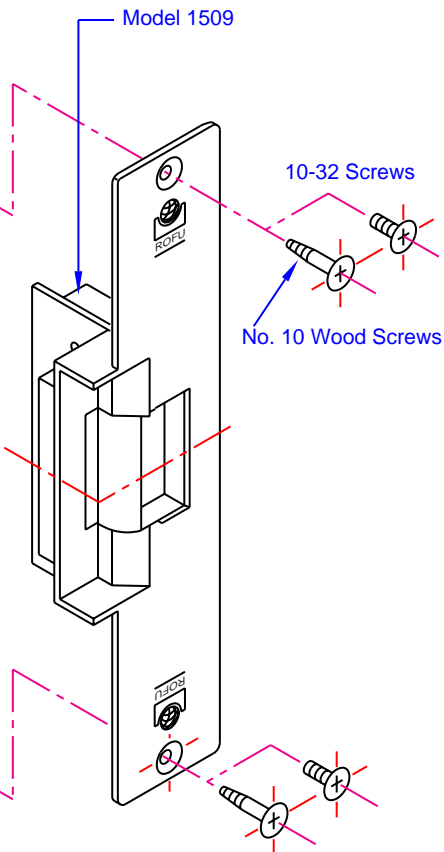

The mounting screws of the electric strike and the mounting screws of the deadlatch are located on the vertical centerline.

NOT TO SCALE - TECHNICAL DATA SUBJECT TO CHANGE WITHOUT NOTICE